

SET UP


INSTRUCTION

ARENA





Take the two cassettes out of the bag and place them on a flat surface with a spacing of about 500 mm/ 20 inches.

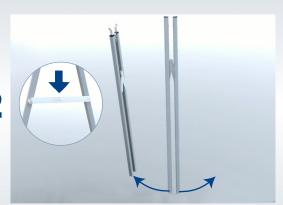

Fold out the two supporting legs. Extend the legs to ensure that the supporting legs are locked into position.

If necessary, adjust the distance between the cassettes.

Insert the supporting legs into the cups located on the cassettes.

Take hold of top profile and pull up the graphic panel.

4



Attach the supporting legs to the brackets found at each end of the top profile.

Repeat steps 4 and 5 for the other side.



Verify that the system is level.

6

ACCESSORIES

As an extra option there is a separate secure device for severe weather.





WE ARE CONSTANTLY DEVELOPING AND IMPROVING OUR PRODUCTS!

Further details about us, our assortment, new innovations, instructions and retailers etc. are available on our website www.expolinc.com.

